


Make the window

Take the Window Facing piece and trace your window pattern onto the wrong side, centered. Pin the piece of fabric right sides together to one of the exterior Bag Body pieces, aligning the sides and finished top edges. Sew along the drawn line.

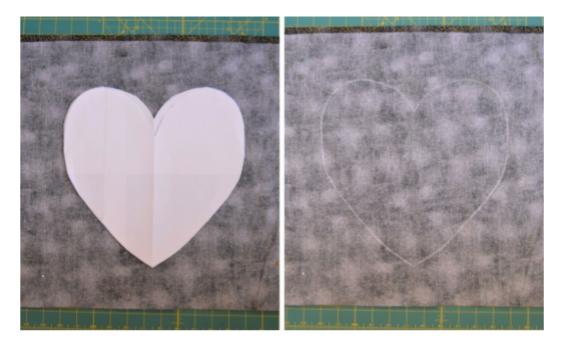

Cut out the middle of the window approximately ½" from the stitching. Trim all corners and clip curves. Turn the lining to the wrong side through the window and press thoroughly. You will now have a hole in your Bag Body piece the shape of your desired window, with crisp, finished edges.