

VIEW B ONLY - Patch Pockets
SOLO Vista B - Bolsillos de Parche

STEP 1: Pin each PATCH POCKET (6) to its lining, RIGHT SIDES together and sew around $\frac{1}{2}$ " (12 mm), leaving an opening between the pattern marks.

Clip the curves, turn the Pockets inside out, fold in the seam allowance at the opening. Press.

Topstitch at $1\frac{1}{4}$ " (3.2 cm) from the top edge across the width of each Pocket.

Pin the Pockets to the FRONT (1) at the pattern marks and sew at $1/8$ " (3mm), leaving the top open and tack the seam at both sides.


PASO 1: *Fija cada BOLSILLO DE PARCHE (6) a su forro, DERECHO con DERECHO y cose alrededor a $\frac{1}{2}$ " (12 mm), dejando una abertura entre las marcas del patrón.*

Haz piques en las curvas, volteá los bolsillos, dobla hacia el interior el margen de costura en el área de la abertura. Plancha.

Cose a $1\frac{1}{4}$ " (3.2 cm) del borde superior a lo ancho de cada bolsillo.

Fija los bolsillos al FRENTE (1) en las marcas del patrón y cose a $1/8$ " (3 mm), dejando la parte superior abierta y rematando en ambos lados.



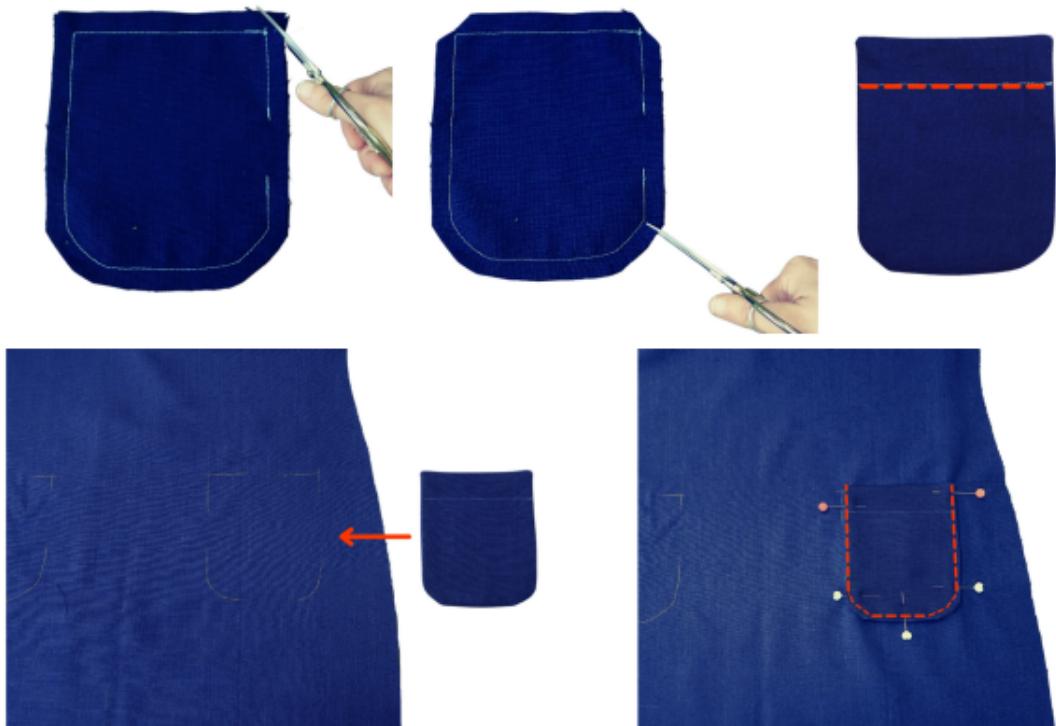

ALL VIEWS
TODAS LAS VISTAS

STEP 2: Bust darts- Pin the bust darts in the FRONT (1), by folding RIGHT SIDES together, at the dart marks. Sew from sides to bust apex.

PASO 2: Pinzas- En el FRENTE (1), fija con alfileres las pinzas doblando DERECHO con DERECHO por las marcas del patrón. Cose desde los costados hasta la punta del busto.



STEP 3: Zipper- Open the invisible zipper and press it open to remove the bend in the teeth. Place the RIGHT SIDE of the zipper (open, pressed and slider side up) on the RIGHT SIDE of the BACKS (2). Flip each side of the invisible zipper to the side so that the zipper and Back are RIGHT SIDES together. Secure with pins. Sew using a zipper foot, sewing as close to the teeth as possible and finishing just before the zipper end.

PASO 3: Cremallera- Abre la cremallera invisible y plánchala abierta para eliminar la curvatura en los dientes. Coloca el REVÉS de la cremallera (abierta, planchada y con la llave hacia arriba) sobre el DERECHO de las ESPALDAS (2). Voltea cada lado de la cremallera invisible hacia el lado de manera que queden cremallera y Espalda DERECHO con DERECHO. Fija con alfileres. Cose usando un prensatelas para cremalleras, cosiendo lo más cerca posible de los dientes y terminando poco antes del final de la cremallera.



Pin the center Backs, RIGHT SIDES together, matching notches and sew from the bottom up until you connect (as closely as possible) with the zipper seam.