



creative sewing lab




PURSE "ANEA"

• Sewing pattern & instructions •



Topstitch the outline of the rectangle.

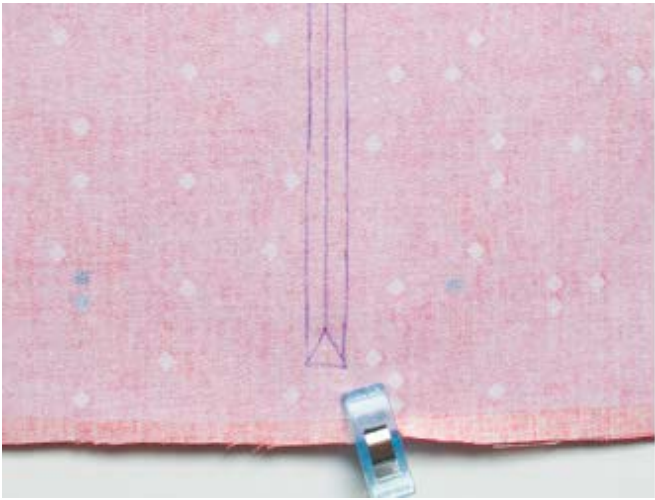

Take your seam ripper or nail scissors and cut the inner horizontal line as well as the diagonal lines close to the seam - without cutting the seam itself.



Put the top layer of fabric completely through the opening.





STEP 6: APPLY THE FASTENER AND FINISH THE PURSE

Iron on an interlining H630 onto one of the fabric pieces for the fastener. Put the 2 pattern pieces for the fastener on top of each other with the wrong sides together and fix them. Topstitch the right, lower and left side of the fastener with 0,75 cm (0.3 inch) seam allowance. The upper straight edge stays open as the opening for turning. Now, cut away the seam allowance to 3-4mm all around it.



Turn the fastener, iron it and topstitch around it close to the edge. Place the fastener in the middle of the right compartments - exactly centered on the seam for the card slots. Fix it with a clip or needle.



Topstitch the fastener close to the edge of the purse. Now put the completed inside of the purse and the fabric piece for the outside next to each other. With a tailors chalk or trick marker mark the horizontal middle position of the fastener as well as a line with 2,5 cm distance to the left edge of the fabric piece. You receive a cross.

